


美工丝印图



KONKA-RM-C3329
 尺寸: 30x8mm
 不干胶贴纸过光膜黑底白字
 备注:
 美规 OTA0xAD191217
 配对名称KONKA-RM-C3329

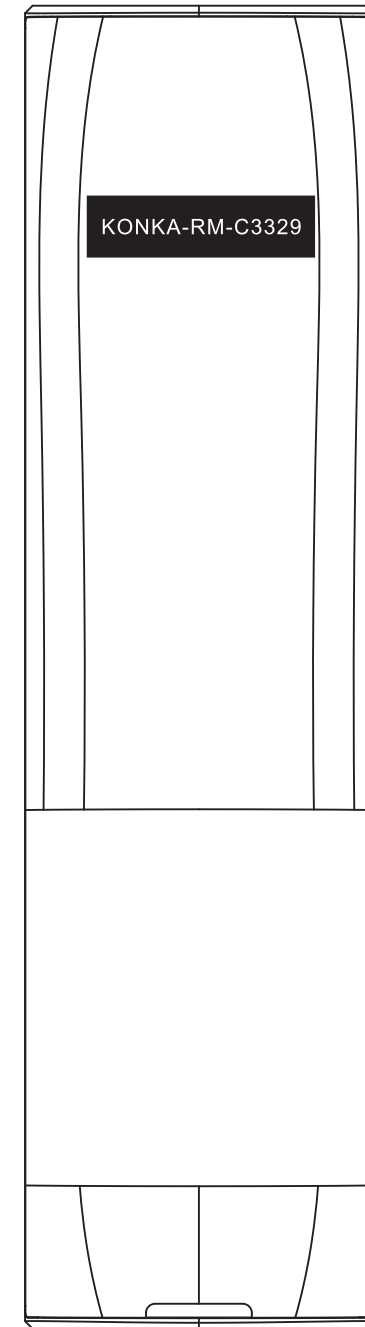

Item	Android TV remote button	红外, 协议: NEC, 客户码: A05F	Usage page	Usage ID	Android KeyEvent
1	Power	0x1C	0x0C	0x0030	KEYCODE_POWER(116)
2	INPUT	0x1A	0x07	0x0059	KEYCODE_TV_INPUT(79)
3	CC	0x5e	0x07	0x003e	KEYCODE_CAPTION(S)(63)
4	Stop	0x0d	0x0c	0x0226	KEYCODE_MEDIA_STOP(128)
5	Mute	0x5F	0x0C	0x00E2	VOLUME_MUTE(113)
6	REWIND	0x45	0x0c	0x00B4	KEYCODE_MEDIA_REWIND(168)
7	playpause	0x2A	0x0c	0x00cd	KEYCODE_PLAYPAUSE(164)
8	FASTFORWARD	0x04	0x0c	0x00B3	KEYCODE_MEDIA_FAST_FORWARD(208)
9	S.MODE	0x58	0x07	0x003D	KEYCODE_MTKIR_AUDIO(62)
10	INFO	0x18	0x0c	0x0060	KEYCODE_INFO(358)
11	P.MODE	0x52	0x0c	0x0065	KEYCODE_CAMERA(212)
12	D-pad up	0x59	0x0C	0x0042	KEYCODE_DPAD_UP(103)
13	D-pad down	0x51	0x0C	0x0043	KEYCODE_DPAD_DOWN(108)
14	D-pad left	0x56	0x0C	0x0044	KEYCODE_DPAD_LEFT(105)
15	D-pad right	0x14	0x0C	0x0045	KEYCODE_DPAD_RIGHT(106)
16	D-pad center (Select)	0x55	0x0C	0x0041	KEYCODE_DPAD_CENTER(353)
17	Back	0x10	0x0C	0x0224	KEYCODE_BACK(158)
18	Home	0x13	0x0C	0x0223	KEYCODE_HOME(172)
19	Menu	0x5A	0x0C	0x0040	KEYCODE_MENU(139)

20	Vol-	0x5d	0x0C	0x00EA	KEYCODE_VOLUME_DOWN(114)
21	Vol+	0x40	0x0C	0x00E9	KEYCODE_VOLUME_UP(115)
22	Microphone activation	0x1D	0x0C	0x0221	KEYCODE_ASSIST(217)
23	CH+	0x03	0x0c	0x009c	KEYCODE_CHANNEL_UP(402)
24	CH-	0x1F	0x0c	0x009D	KEYCODE_CHANNEL_DOWN(403)
25	1	0x53	0x07	0x001E	KEYCODE_1(2)
26	2	0x50	0x07	0x001F	KEYCODE_2(3)
27	3	0x12	0x07	0x0020	KEYCODE_3(4)
28	4	0x4f	0x07	0x0021	KEYCODE_4(5)
29	5	0x4c	0x07	0x0022	KEYCODE_5(6)
30	6	0x0e	0x07	0x0023	KEYCODE_6(7)
31	7	0x4b	0x07	0x0024	KEYCODE_7(8)
32	8	0x48	0x07	0x0025	KEYCODE_8(9)
33	9	0x0A	0x07	0x0026	KEYCODE_9(10)
34	0	0x44	0x07	0x0027	KEYCODE_0(11)
35	-	0x5c	0x07	0x003f	KEYCODE_NUMPAD_SUBTRACT(64)
36	channel_back	0x47	0x07	0x003A	KEYCODE_LAST_CHANNEL(59)
37	RED	0x42	0x0c	0x0069	KEYCODE_PROG_RED(398)
38	GREEN	0x41	0x0c	0x006a	KEYCODE_PROG_GREEN(399)
39	YELLOW	0x01	0x0c	0x006c	KEYCODE_PROG_YELLOW(400)
40	BLUE	0x00	0x0c	0x006b	KEYCODE_PROG_BLUE(401)
41	YouTube	0x65	0x07	0x0056	KEYCODE_NUMPAD_SUBTRACT(74)
42	Netflix	0x66	0x07	0x0044	KEYCODE_F11(87)

品名: 遥控器	品号 . : 504Q4371109	<input type="checkbox"/> 业务:	<input type="checkbox"/> 硬件:
型号 :	图号 . : 43U55A-MG10-01	<input type="checkbox"/> 软件:	<input type="checkbox"/> 结构:
结构号 :	订单号 : 2130002202	<input type="checkbox"/> 测试:	<input type="checkbox"/> 认证:
设计: 栾娜 2020.4.23	批准:	版本:A QR-RD-015B	